
Trial series T1102D
3kW 4kVA Inverter Unit
Users Manual

Index

1. Introduction.....	3
1.1. Introduction	3
1.2. Suitable use.....	3
1.3. Precaution	3
1.4. Warning	4
2. Inverter overview.....	7
2.1. Feature	7
2.2. Inverter block diagram	7
2.3. Specification	8
3. Precaution for each circuits blocks	9
3.1. In-rush current protection circuits.....	9
3.2. PFC circuit	11
3.3. Choice of the current detection circuits	12
3.4. The filter circuits for the current detection	12
3.5. Alterations for one shunt current detection method.....	14
3.6. Over current detection circuits	15
3.7. Voltage detection circuits.....	16
3.8. How to choose CPU voltage	16
3.9. Connection information with CPU board.....	17
4. External connection	19
4.1. FAN power input	19
4.2. Inverter AC output.....	19
4.3. Inverter AC input	20
5. Temperature raise value data for T1102.....	21
5.1. Temperature raise value data.....	21
6. Ordering information	22
6.1. Order number list.....	22
6.2. Obsoleted product.....	22
6.3. Difference between T1102A / T1102B / T1102D	22
6.3.1. Enclosure difference.....	22
6.3.2. Circuit of T1102A	22
6.3.3. Circuit of T1102B	23
6.3.4. Circuit of T1102C	23
6.3.5. Circuit of T1102D	23

1. Introduction

1.1. Introduction

This users' manual is for T1102D-Vxxx low voltage inverter. These inverters are designed for PMSM motor and induction motor. When you use this inverter, please check your motor specifications like sensor, power, voltage range, current range and so on.

1.2. Suitable use

This inverter is suitable for research or development stage.

1.3. Precaution

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Desk Top Laboratories Inc products listed herein, please confirm the latest product information with a Desk Top Laboratories Inc. Also, please pay regular and careful attention to additional and different information to be disclosed by Desk Top Laboratories Inc such as that disclosed through our website.
2. Desk Top Laboratories Inc does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of Desk Top Laboratories Inc products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Desk Top Laboratories Inc or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Desk Top Laboratories Inc product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Desk Top Laboratories Inc assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Desk Top Laboratories Inc products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Desk Top Laboratories Inc products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Desk Top Laboratories Inc has used reasonable care in preparing the information included in this document, but Desk Top Laboratories Inc does not warrant that such information is error free. Desk Top Laboratories Inc assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Desk Top Laboratories Inc products are classified to the experimental use. Especially, you may

not use any Desk Top Laboratories Inc product for any application for Transportation equipment (automobiles, trains, ships, etc.), traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support; Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support.

8. You should use the Desk Top Laboratories Inc products described in this document within the range specified by Desk Top Laboratories Inc, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Desk Top Laboratories Inc shall have no liability for malfunctions or damages arising out of the use of Desk Top Laboratories Inc products beyond such specified ranges.

9. Although Desk Top Laboratories Inc endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Desk Top Laboratories Inc products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Desk Top Laboratories Inc product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.

10. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Desk Top Laboratories Inc.

1.4. Warning



Danger

- **There is a risk of fire.**

If you find inverter firing, Fuming, abnormal sounding, or other abnormal conditions, stop the inverter immediately. After you stop the inverter, you should disconnect all wiring connected to the inverter.



Danger

- **There is a risk of electrical shock.**

There is a high voltage parts inside the inverter. Do not touch directly on working or after you stopped the inverter, while there is a charge in the capacitor. If you don't keep this warning, by electric shock, there is a risk of serious injury or death.



Danger

- **There is a risk of blindness.**

This inverter has an enclosure. If the inverter ruptured while opening the lid of the enclosure, there is a possibility the liquid contained in the internal capacitor, such as

damaged parts enters the eyes, and it would make you blindness. Please do not open the lid of the enclosure after stopped the inverter immediately, even during the operation. If you open the lid, please be sure to wear goggles for protection such as in the photo below.



Caution

- **There is a risk of burns**

While driving or after stopped, this inverter gets hot such as more than 100 degree. If you touch the inverter, please pay attention to the temperature.



Caution

- **Please do not block the air vents of the enclosure. (only for T2000B)**

In this inverter there is a vent for cooling the inside. If you block the air vent, cooling capacity is reduced. And it may cause the inverter damage or fire.



Caution

- **Please drive the FAN while driving the inverter. (only for T2000B)**

In this inverter there is a FAN to cooling the inverter. If you do not drive the FAN while driving the inverter, the temperature of the inverter will rise, it may cause the inverter damage or fire.



Caution

- **If you want to create a software, please create the protection routine first, such as over-current protection, over-heat protection and so on.**

In this inverter, there is no mechanism to protect the inverter hardware alone. Please make the protection software first, or you may break the inverter.



Caution

- **Do not drive the inverter when the ambient is very high or very high humidity.**

This inverter is designed for experimental use. So this inverter won't work under below conditions. Do not use under the environment that is out of the operation environment of this manual.

- Environment where there is vibration and shock.
- Environment where there is saprophagous gas, combustible gas, humidity over 90%
- Very High or very low temperature environment



Caution

- **This product handling high voltage. Please use a person who is aware of the danger of high voltage.**

The wiring materials are enclosed in this inverter for reference. But they do not necessarily mean that they are appropriate for your application. Please use it before check the applications.



Caution

- **Rating of this product is measured under certain conditions.**

Maximum power capacity would be affected by input voltage output voltage, output current, load conditions, operations conditions and ambient temperature. To prevent the inverter broken, please watch the temperature, current, voltage, and external sensors for to protect inverter.

2. Inverter overview

2.1. Feature

This inverter unit is designed for a research or development of consumer use.

- * Non-isolated structure inverter based on an inexpensive circuit for a mass-production.
- * This inverter is driven by RL78G14, RX111, RX62T CPUs. (2013/11/22)
- * Unused CPU pin can be used freely by the user.
- * DC link voltage, three phase output current, three phase output voltage sensor is included.
- * Convenient to experiment, top transparent case, with cooling FAN
- * Inrush current circuits

2.2. Inverter block diagram

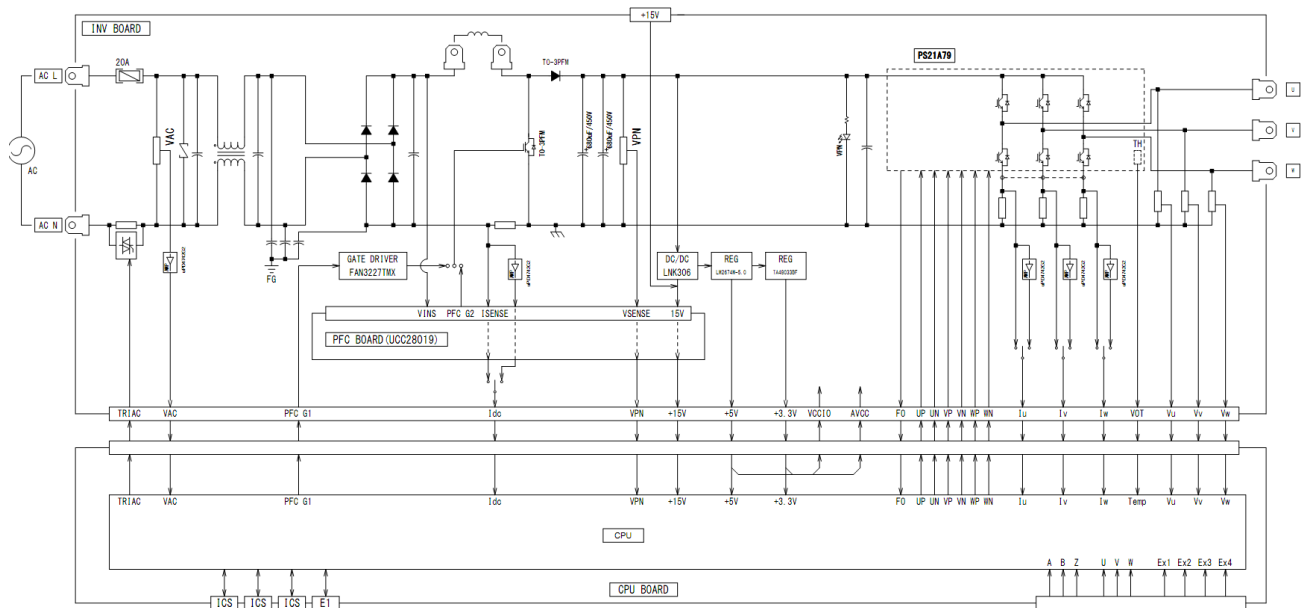


图 2.1. Inverter block diagram

2.3. Specification

Item	Specification	Remark
Operation temperature	0°C~35°C	
Operation humidity	Below 90% (No dew condensation)	
Size	250 x 350 x 180 mm	
Weight	4.0kg	
Input voltage range	AC85V~AC265Vrms	
Maximum input power	3kW at AC200Vrms input	1.5kW at AC100Vrms input
Rated output power	4kVA at AC200Vrms output	At switching frequency 15kHz
Rated output current	AC11.6A rms at AC200V output	At switching frequency 15kHz
Switching frequency	2kHz~20kHz	This data is example
Deadtime	2.5us	This data is example
Current detection	3 shunt	3 shunt is default. Can be changed to 1 shunt type
Shunt register	10mΩ	
Control power supply	PS21A79	MITSUBISHI ELECTRONICS
Control power supply	Generated from DC link	Non-isolated
DC link – control circuit isolation	Non-isolated	
Cooling	Force air cooling	
PFC controller	UCC28019A	
Main circuit devices	FCH041N60F APT60DQ60BCTG	MOSFET FairChild Vds=600V, Id=48.1A @100deg Fast recovery diode APT Vr=600V, If=60A @110deg
Grid voltage sensor		
DC-BUS current sensor		
DC-BUS voltage sensor		
3phase current sensor		
3phase voltage sensor		
IPM temp sensor		

*Caution: Each maximum value, the rated value, may be changed by the type of load, input voltage, ambient environment, such as by air cooling conditions. Desk top laboratories Inc does not guarantee the condition of all the rated and maximum values of these specifications. Please install the protection way by the customer, depending experimental environment and the load environment.

3. Precaution for each circuits blocks

3.1. In-rush current protection circuits

<IMPORTANT>

This inverter has in-rush current protection circuits. In-rush current protection circuit is to prevent the destruction of the inverter main circuits and capacitor. If you power on the inverter when the capacitor does not have the electro charge, very large current flows into the DC link capacitor, because the capacitor voltage is almost 0. Once this situation happens, the inverter is sometimes destroyed. So to prevent large current flows, we add the in-rush current protection circuits. In the system the usage is fixed, there is a type so that it is activated automatically by the hardware. As the usage of this inverter is not fixed, the in-rush current control circuit of this inverter is controlled by the software.

This circuit has current limit resister, relay or Triac. In rush protection function works following. When the power on, relay or Triac is open. After DC-link voltage goes enough high, CPU turns on the relay or Triac.

This protection circuit is to prevent the destruction of the inverter. But if you mistake how to use this circuit, it may break the inverter. Please keep following cautions.

* Procedure example:


- A) Keep off the Triac until DC link voltage reaches 80% of the rated PFC voltage.
- B) DC link voltage reaches 80% of the rated DC link voltage, then turn on the Triac gate signal.
- C) Do not off the gate signal forever.

* Caution

1) Do not start to work the inverter, before Triac gate signal goes ON state. Or in rush protection resister will burn.

2) Once turn on the Triac gate signal, do not gate off.

3) Do not power on and off frequently. In rush current protection resister will burn.

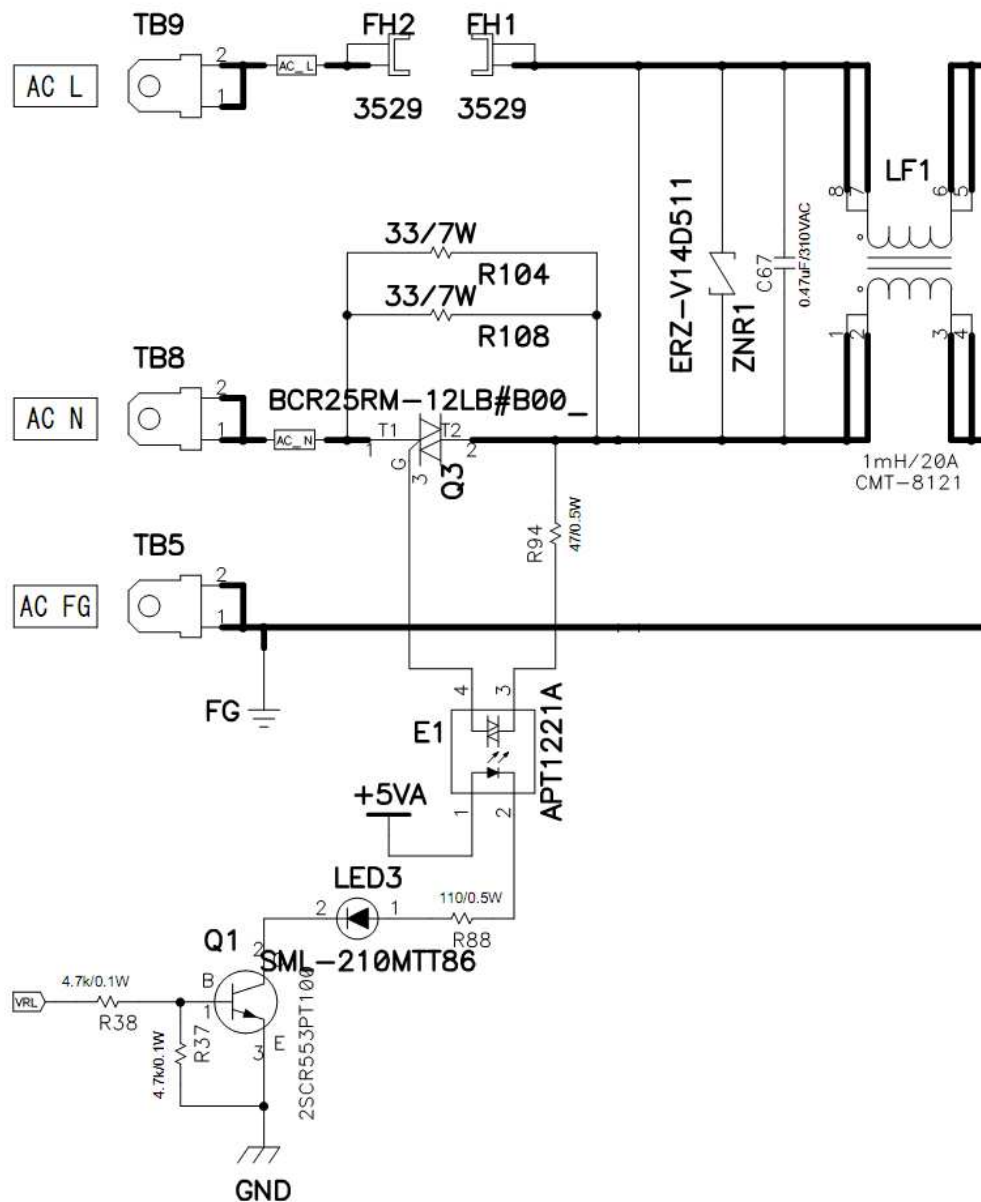

3.3. Choice of the current detection circuits


There are two outputs of the current detection circuits of this inverter. Two outputs are selected by JP1, JP2, JP3, JP4. Please choose JP setting according to your CPU setting.

At $AV_{CC} = 5V$

JP	1-2 Short, 2-3 Open	Equations	1-2 Open, 2-3 Short	Equations
	Outputs		Outputs	
JP1	Iu OPAMP output	$V_{out} = (10 * R * I_{in} + AV_{CC}) / 2$ $I_{in}=50A \rightarrow V_{out}=5V$ $I_{in}=0A \rightarrow V_{out}=2.5V$ $I_{in}=-50A \rightarrow V_{out}=0V$	Iu OPAMP output	$V_{out} = (9 * R * I_{in} + AV_{CC}) / 2$ At 内蔵 OPAGain=5 $I_{in}=55.56A \rightarrow V_{out}=5V$ $I_{in}=0A \rightarrow V_{out}=2.5V$ $I_{in}=-55.56A \rightarrow V_{out}=0V$
JP2	Iv OPAMP output		Iv OPAMP output	
JP3	Iw OPAMP output		Iw OPAMP output	
JP4	Ipf OPAMP output		Ipf OPAMP output	


At $AV_{CC} = 3.3V$

JP	1-2 Short, 2-3 Open	Equations	1-2 Open, 2-3 Short	Equations
	Outputs		Outputs	
JP1	Iu OPAMP output	$V_{out} = (10 * R * I_{in} + AV_{CC}) / 2$ $I_{in}=33A \rightarrow V_{out}=3.3V$ $I_{in}=0A \rightarrow V_{out}=1.65V$ $I_{in}=-33A \rightarrow V_{out}=0V$	Iu OPAMP output	$V_{out} = (9 * R * I_{in} + AV_{CC}) / 2$ At 内蔵 OPAGain=5 $I_{in}=36.67A \rightarrow V_{out}=3.3V$ $I_{in}=0A \rightarrow V_{out}=1.65V$ $I_{in}=-36.67A \rightarrow V_{out}=0V$
JP2	Iv OPAMP output		Iv OPAMP output	
JP3	Iw OPAMP output		Iw OPAMP output	
JP4	Ipf OPAMP output		Ipf OPAMP output	

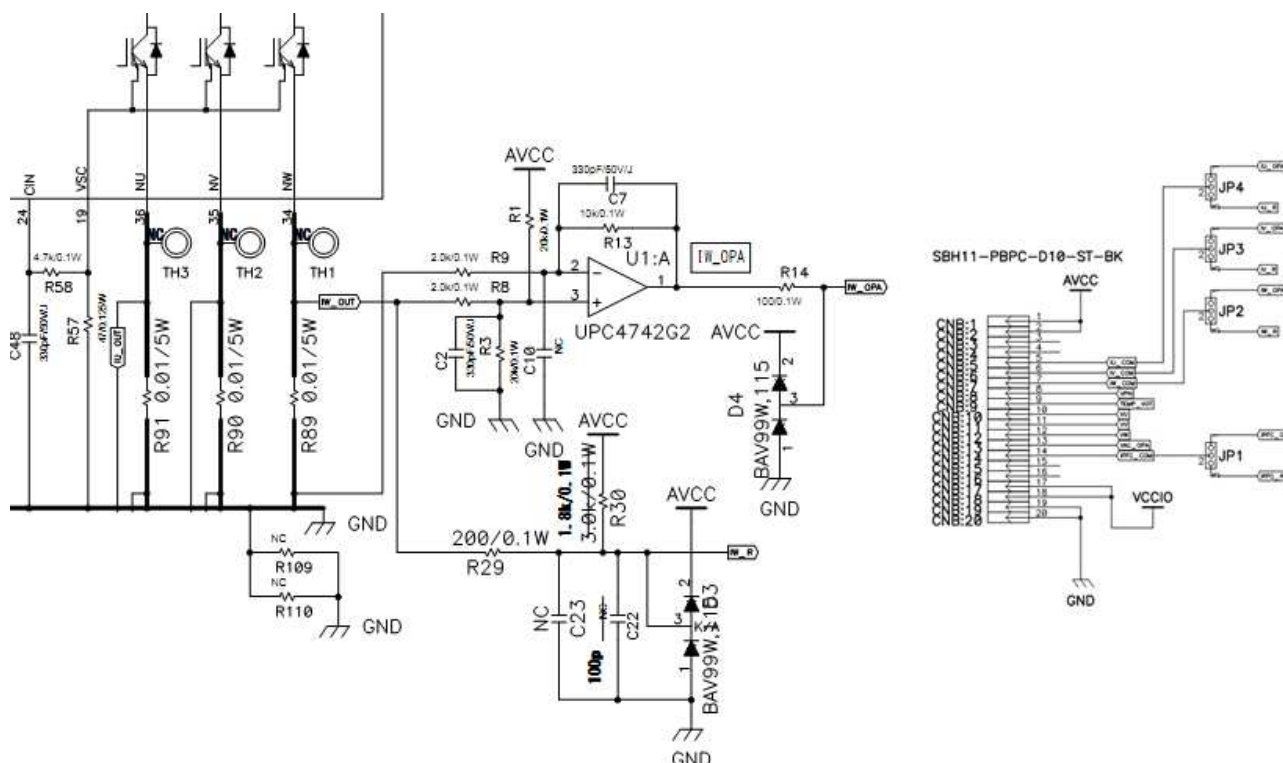


3.4. The filter circuits for the current detection

The filter parameters for the current detection circuits need be changed by the application, noise environment, switching frequency, control algorithm and so on. As shown below, this inverter provides the pattern of the filter capacitor.

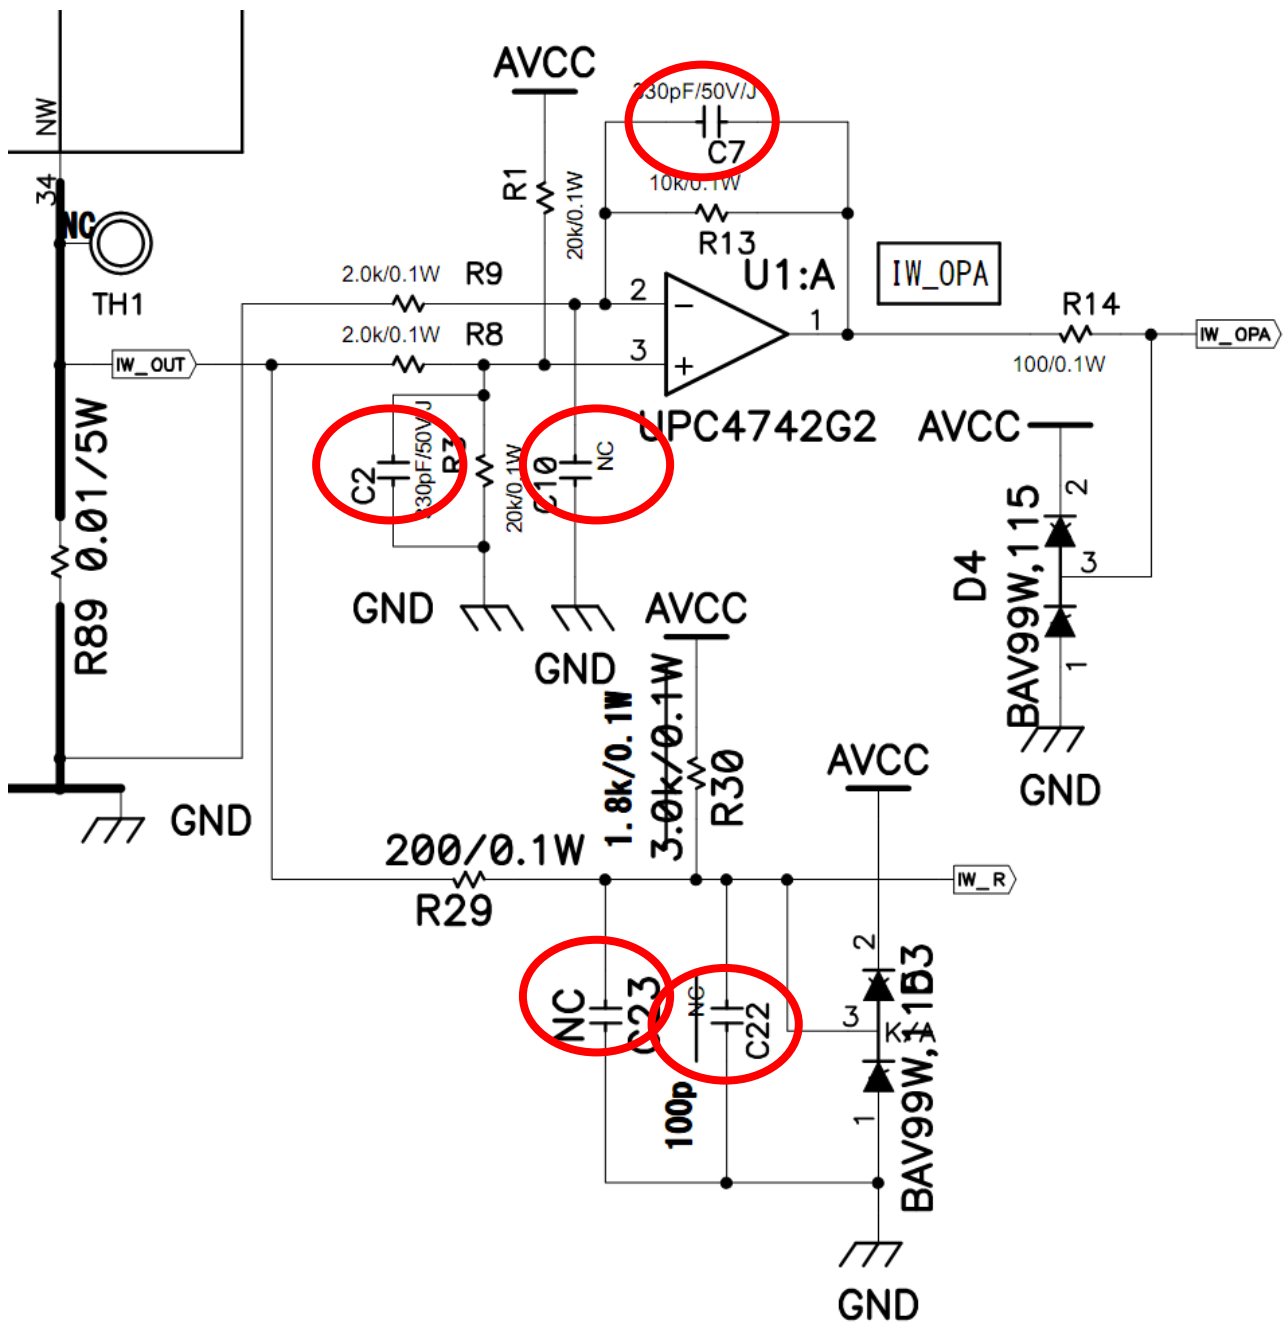


3.5. Alterations for one shunt current detection method

This inverter is based on three shunt current detection. But this inverter can be converted to the one shunt current detection. If you want to use one shunt current detection method, please connect TH1, TH2 and TH3 hole. In case of this alteration, resistor value will be 1/3. You need to change the resistor value or remove resistors depending on your requirement.

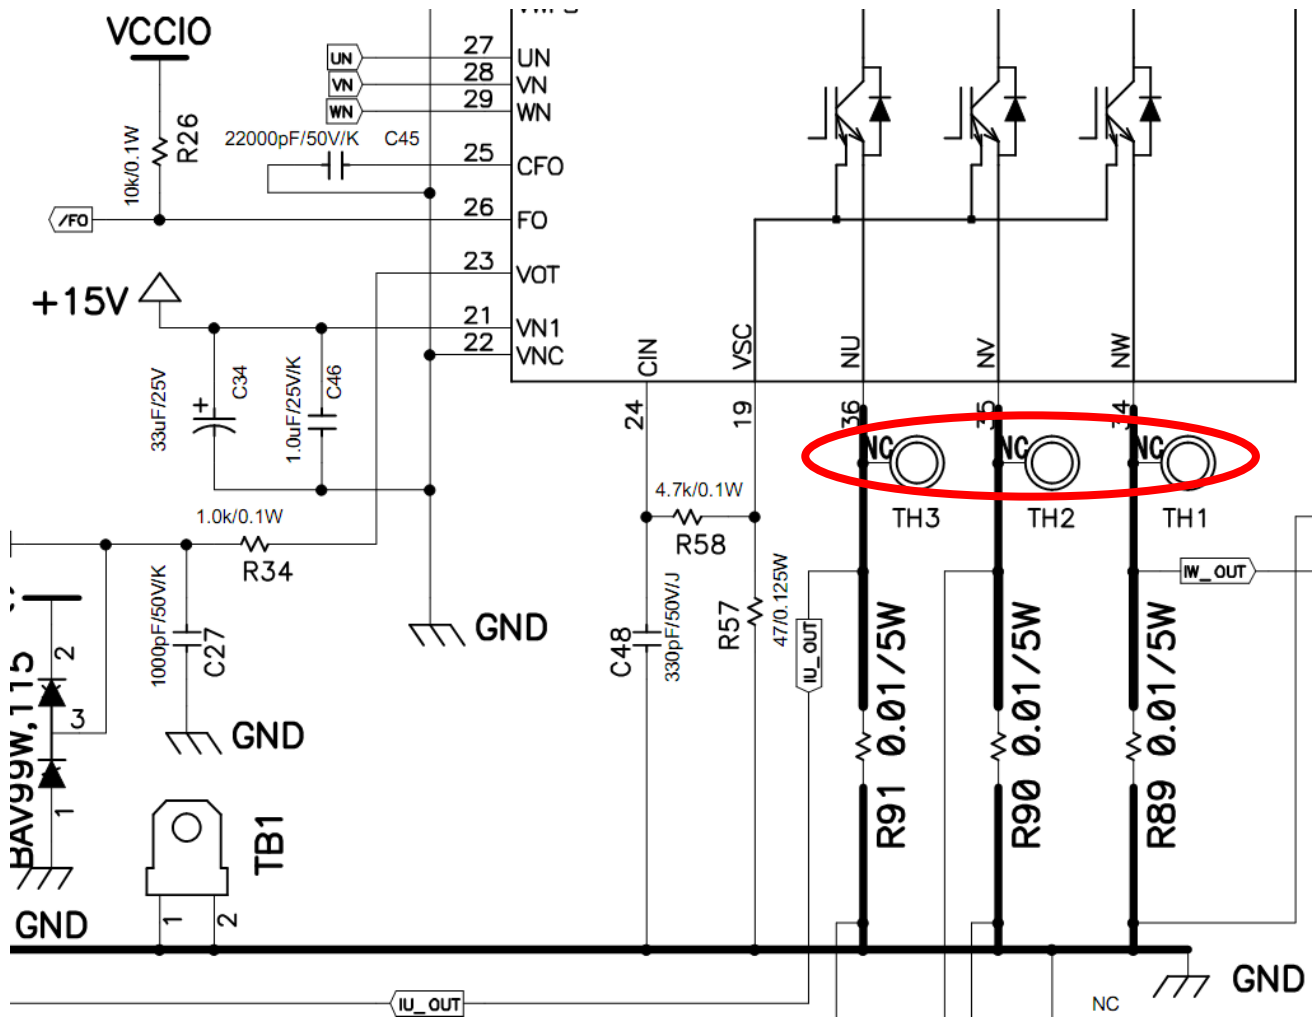

3.6. Over current detection circuits

The over current detection circuits of this inverter use the comparators. The outputs of the comparators are connected to the /INT pin of CPU. So user need to install the gate-block routine to your application.

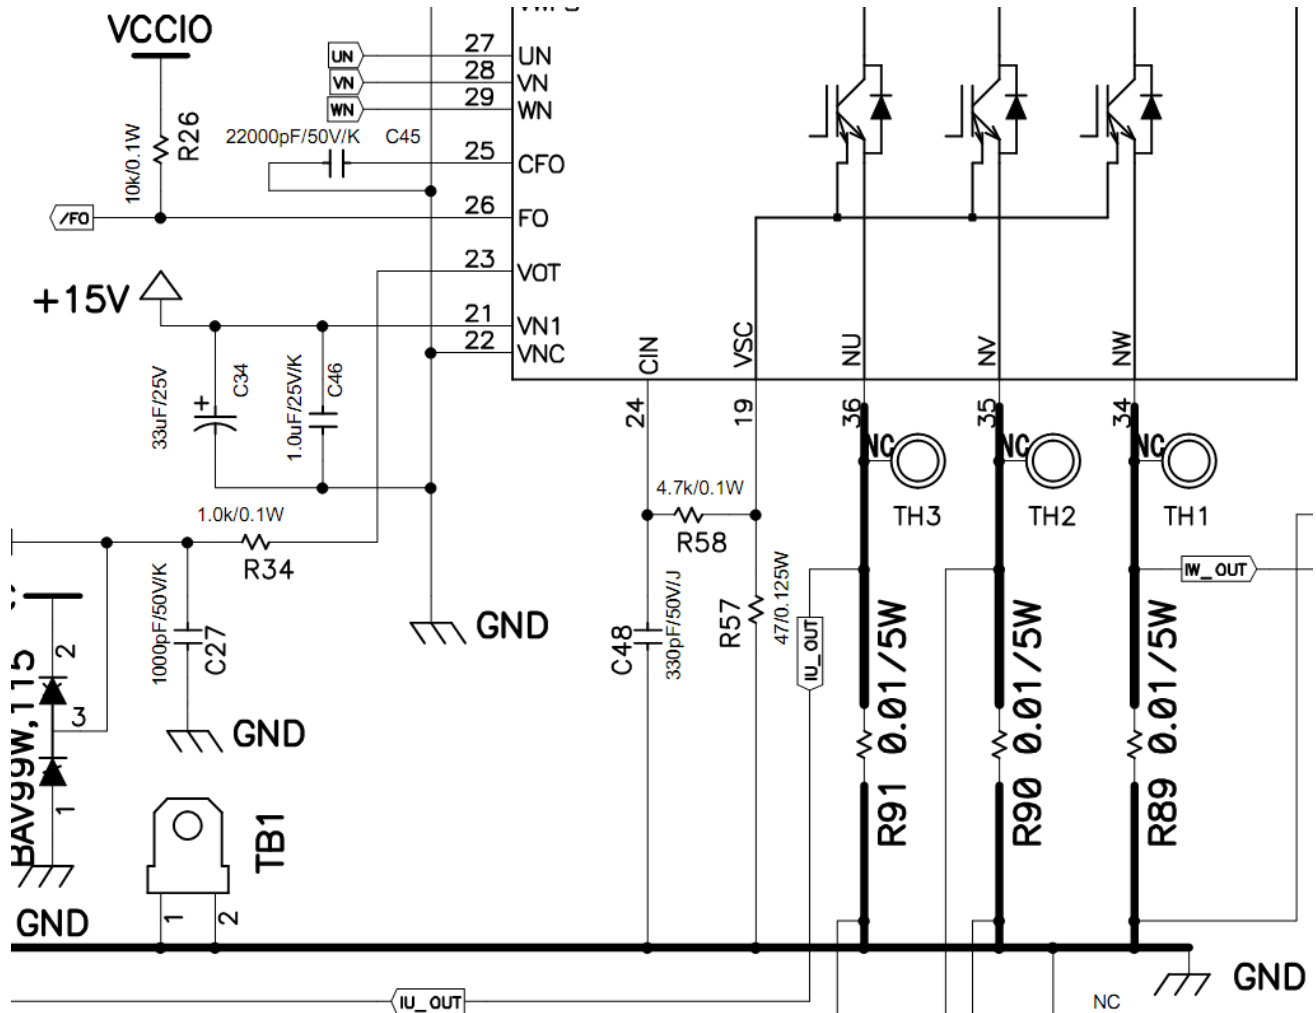

3.7. Voltage detection circuits


This inverter has four voltage detection circuits.

At AVcc = 5V

Voltage	Equation
DC link	$V_{out} = \frac{5.0}{686.8} \times V_{in}$
U phase	
V phase	
W phase	$\begin{aligned} V_{in}=686.8V &\rightarrow V_{out}=5V \\ V_{in}=0V &\rightarrow V_{out}=0V \end{aligned}$

At AVcc = 3.3V

Voltage	Equation
DC link	$V_{out} = \frac{3.3}{453.3} \times V_{in}$
	$\begin{aligned} V_{in}=453.3V &\rightarrow V_{out}=3.3V \\ V_{in}=0V &\rightarrow V_{out}=0V \end{aligned}$

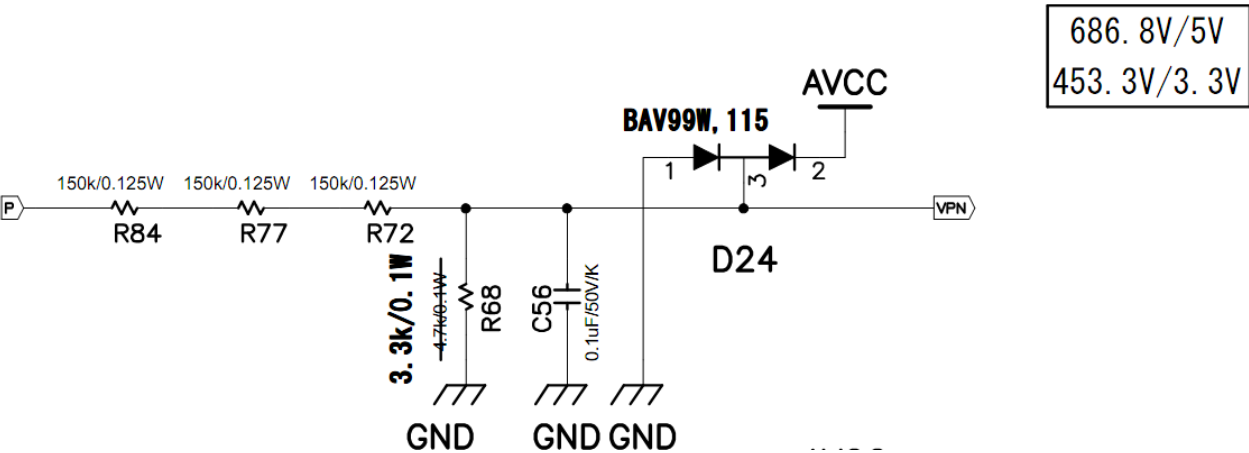

3.8. How to choose CPU voltage

This inverter board automatically supplies the proper CPU voltage. You don't worry about how to choose CPU voltage.


3.9. Connection information with CPU board

CN-A Digital	Direction	STD Inverter	T5201 RX62T 100pin *1	T5202 RX62T 64pin *1	T5101 RL78/G14 64pin	T5301 RX111 64pin	T5102 RL78/F14 80pin	----- RX63U 100pin
1	To INV	—	PA2	PA2	P52	P32	P44	
2	To INV	—	PA3	PA3	P53	PB0	P47	
3	To INV	PFC_G1	PD0	PB0	P54	PA1	P41	
4	To INV	VRL	PB3	PB3	P55	PA0	P42	
5	To CPU	/FO	P70	P70	P137	PB5	P137	
6	To CPU	—						
7	To INV	WN	P76	P76	P10	P55	P30	
8	To INV	VN	P75	P75	P11	PB1	P16	
9	To INV	UN	P74	P74	P14	PB6	P120	
10	To INV	WP	P73	P73	P12	P54	P17	
11	To INV	VP	P72	P72	P13	PB3	P15	
12	To INV	UP	P71	P71	P15	PB7	P125	
13	To CPU		P91	P91	P05	P35	P46	
14	To CPU		P92	P92	P06	P31	P45	
15	To CPU	5V	5V	5V	5V	5V	5V	
16	To CPU	5V	5V	5V	5V	5V	5V	
17	To CPU	GND	GND	GND	GND	GND	GND	
18	To CPU	GND	GND	GND	GND	GND	GND	
19	To CPU	3.3V	3.3V	3.3V	3.3V	3.3V	3.3V	
20	To CPU	3.3V	3.3V	3.3V	3.3V	3.3V	3.3V	

CN-B Analog	Direction	STD Inverter	T5201 RX62T 100pin *1	T5202 RX62T 64pin *1	T5101 RL78/G14 64pin	T5301 RX111 64pin	T5102 RL78/F14 80pin	----- RX63U 100pin
1	To INV	AVCC	5V	5V	5V	3.3V	5V	
2	To INV	AVCC	5V	5V	5V	3.3V	5V	
3	To CPU	—						
4	To CPU	—						
5	To CPU	IU	ANI 000	ANI 000	ANI 0	ANI 0	ANI 2	
6	To CPU	IV	ANI 001			ANI 1	ANI 4	
7	To CPU	IW	ANI 002	ANI 001	ANI 1	ANI 2	ANI 3	
8	To CPU	VPN	ANI 003	ANI 002	ANI 2	ANI 3	ANI 8	
9	To CPU	TEMP(Vot)	ANI 0	ANI 103	ANI 7	ANI 4	ANI 10	
10	To CPU	VU	ANI 101	ANI 003	ANI 3	ANI 6	ANI 5	
11	To CPU	VV	ANI 102	ANI 100	ANI 4	ANI 8	ANI 6	
12	To CPU	VW	ANI 103	ANI 101	ANI 5	ANI 11	ANI 7	
13	To CPU	(VAC)	ANI 1		r ANI 16	ANI 12	ANI 9	
14	To CPU	(IPFC)	ANI 100		r ANI 17	ANI 13	ANI 13	
15	To CPU	(VR1)	ANI 2	ANI 102	ANI 6	ANI 14	ANI 11	
16	To CPU	(RSV)	ANI 3		ANI 19	ANI 15	ANI 12	
17	To INV	VCCIO	5V	5V	5V	3.3V	5V	
18	To INV	VCCIO	5V	5V	5V	3.3V	5V	
19	To CPU	GND	GND	GND	GND	GND	GND	
20	To CPU	GND	GND	GND	GND	GND	GND	


4. External connection

4.1. FAN power input

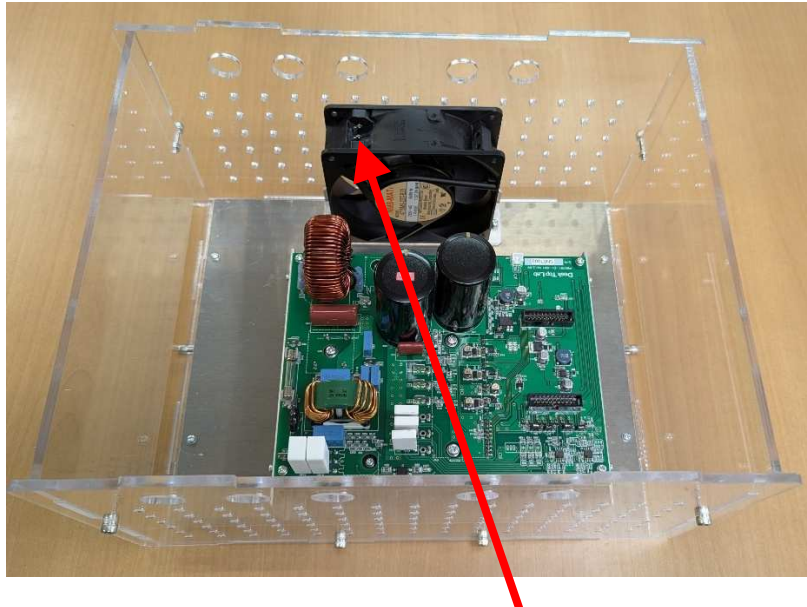

Connect FAN power input connector

4.2. Inverter AC output

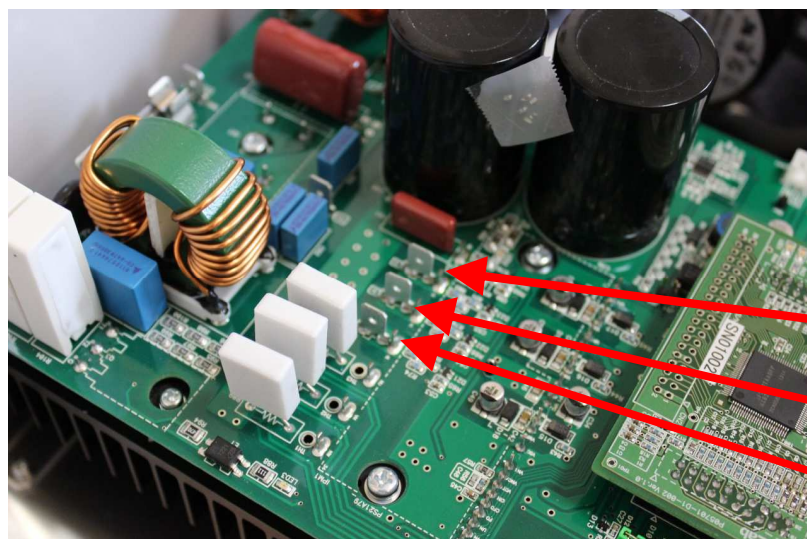


U phase output

V phase output

W phase output

4.3. Inverter AC input

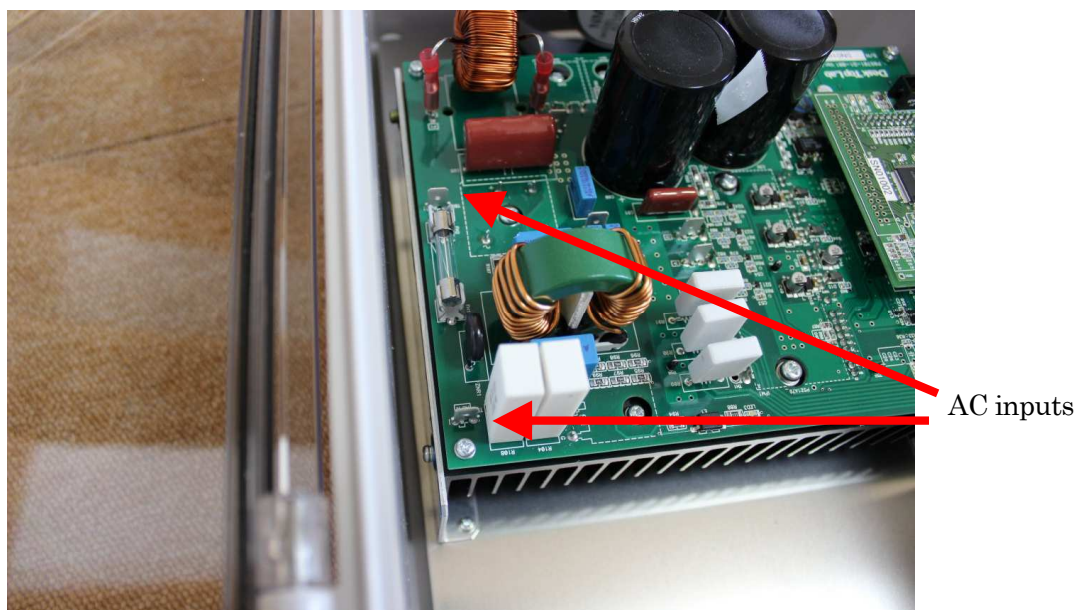

5. Temperature raise value data for T1102

5.1. Temperature raise value data

Condition :

T1102 inverter + RX62T 100pin CPU card

Internal FAN 100V rms

Input voltage AC 200Vrms

Ambient 25°C

Load 3 phase LR load

Input power	PFC Diode	PFC MOSFET	PFC Inductor	Bridge Diode	In-rush current protection TRIAC	IPM
1.0kW	31°C	34°C	33°C	31°C	38°C	40°C
1.5kW	36°C	42°C	38°C	35°C	44°C	43°C
2.0kW	41°C	48°C	43°C	42°C	55°C	45°C
2.4kW	45°C	60°C	50°C	44°C	65°C	48°C
2.85kW	52°C	71°C	63°C	52°C	76°C	56°C
3.0kW	56°C	83°C	69°C	54°C	82°C	58°C
3.2kW	65°C	89°C	75°C	62°C	84°C	60°C

6. Ordering information

6.1. Order number list

Order number	Inverter	FAN
T1102-V100	T1102	AC110V
T1102-V200	T1102	AC230V

6.2. Obsoleted product

Order number	Inverter	FAN
T1102A-V100	T1102 Ver.2.00	AC110V
T1102A-V200	T1102 Ver.2.00	AC230V
T1102B-V100	T1102 Ver.2.01	AC110V
T1102B-V200	T1102 Ver.2.01	AC230V
T1102C-V100	T1102 Ver.2.02	AC110V
T1102C-V200	T1102 Ver.2.02	AC230V

6.3. Difference between T1102A / T1102B / T1102D

The T1102A / T1102B / T1102D have slightly different circuit constants, cases, etc.

Inverter	Circuits	Enclosure	Comment
T1102A-Vxxx	P05701-C0-001-V2.00	TAKACHI BCAP253518T	Not sold
T1102B-Vxxx	P05701-C0-001-V2.01	TAKACHI BCAP253518T	
T1102C-Vxxx	P05701-C0-001-V2.02	TAKACHI BCAP253518T	Not sold
T1102D-Vxxx	P05701-C0-001-V2.02	DTL Acrylic enclosure	After 2025/7/26

6.3.1. Enclosure difference

The T1102A / T1102B / T1102C use Takachi BCAP253518T as the case.

The T1102D uses a DTL acrylic case as the case, making it easier to see inside.

6.3.2. Circuit of T1102A

It is made using circuit diagram P05701-C0-001 Ver.2.00.

Only a very limited number are available for sale.

6.3.3. Circuit of T1102B

It is made using circuit diagram P05701-C0-001 Ver.2.01.

The majority of the inverters sold are of this type.

6.3.4. Circuit of T1102C

It was planned to be produced with circuit diagram P05701-C0-001 Ver.2.02. It is not for sale.

As a measure to prevent noise at high power, the value of the capacitor in the PFC part has been changed compared to Ver.2.01.

6.3.5. Circuit of T1102D

It is manufactured based on circuit diagram P05701-C0-001 Ver.2.02. It will be shipped after July 26, 2025.

The value of the capacitor in the PFC part has been changed compared to Ver. 2.01 to prevent noise at high power.

Trial series T1102 3kW 4kVA High Voltage Inverter Unit Users Manual

Issue date: July-26-2025 Ver.1.00 EN

Issue: Desk Top Laboratories Inc.
101, 35-7, MATSUGI, HACHIOUJI-SHI, TOKYO, JAPAN, 192-0362
